



FREESTANDING PANEL FEET

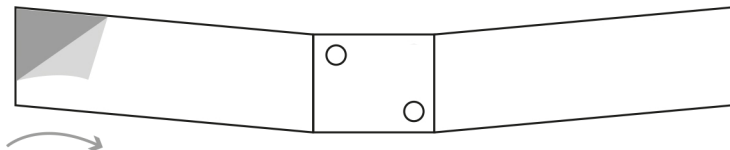

- 1** Remove protective film covering from feet.



- 2** Screws come pre-drilled in the panel. Turn panel onto side, undo screws, line up pre-drilled feet holes with panel holes and screw into place securely.

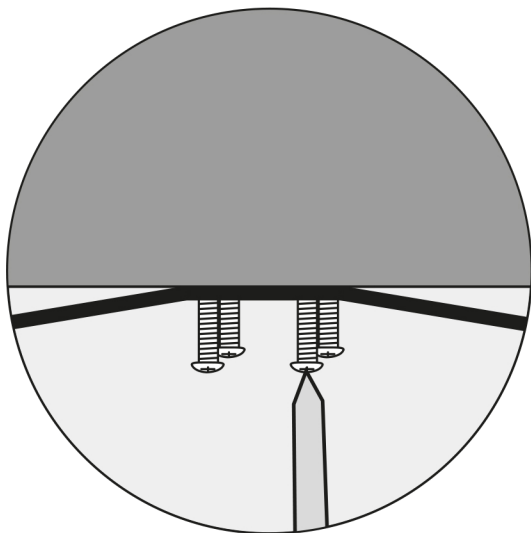

- 3** Stand upright on feet.

